 




"ISHII" Brand Premium Tile Cutting Machines

Instruction Manual For JP/JN Series Deluxe Big Clinker Tile Cutters

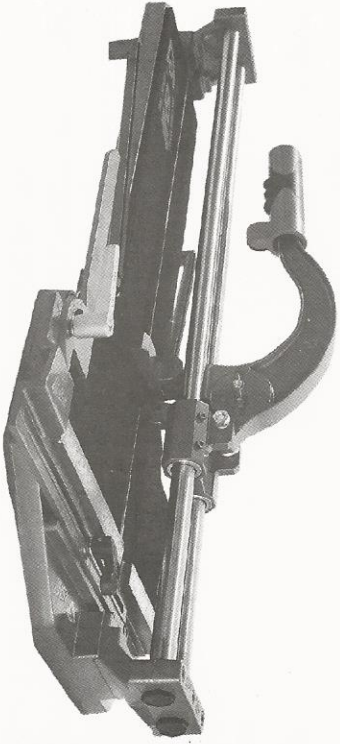

INSTRUCTIONS

1. Adjust the protractor gauge for the proper tile size and place the tile to the most forward position of the cutter against the stop.



2. Place the cutting wheel on the rear edge of the tile and slide to wheel forward by pushing the handle down, scoring the tile as the handle is pushed forward. It is important to make this scoring cut in one continuous motion, scoring only once per tile.




3. After scoring, and without moving the tile, position the handle so that the breaker foot is directly above the tile's front edge at the stop. Apply increasing pressure on the handle until the tile snaps along the score line.



PARTS LIST AND DIAGRAM

- 1. Rail
- 2. Handle
- 3. Press Bearing
- 4. New Ball Bearing Assembly
- 5. Quick Gauge Level
- 6. Rubber Stopper
- 7. New End Post
- 8. Rubber Pads
- 9. Protractor Gauge
- 10. Breaker Foot
- 11. TOSHIBA Cutting Wheel
- 12. Height Adjustment Knob
- 13. Center Holder
- 14. Extension Arm

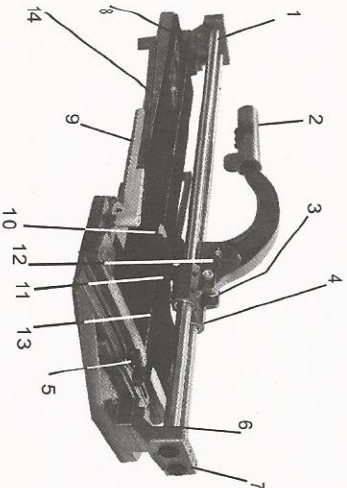


WARNING! Read and understand all instruction.
KEEP THESE INSTRUCTIONS FUTURE REFERENCE.

NOTES

1. The JP/JN series Deluxe Clinker Tile Cutters have an adjustable height (three scoring positions and one retracted position) wheel which permits easier cutting of up to 20mm(3/4") thick tiles, and makes cutting of mosaic possible as the wheel can be moved up to permit the breaker foot to operate at any position along the rails.
2. If needed, a few drops of light oil, or rust preventive, can be used to lubricate the rails on the cutters.
3. Wear is normal in the chrome plated rails and can be evenly distributed by occasional rotation of each of the two rails. For cutters with socket head cap screw holding the rails, loosen each socket head cap screw and slightly rotate the rails. Retighten the socket head cap screws when finished.
4. The only part normally needing replacement is the scoring wheel. All other parts are also available, if needed.

HEIGHT OF CUTTING WHEEL ADJUSTABLE TO FOUR LEVELS

The height cutting wheel can be adjusted to four levels according to the thickness of the tile by one touch motion. Therefore, tiles of any thickness can easily be cut.

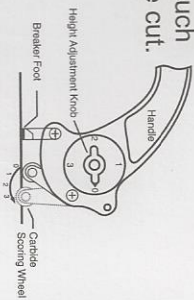

EASY CUTTING OF MOSAIC TILE

When cutting mosaic tile, after scoring is completed, the first tile can be cut as long as the Breaker Foot hits the tile light if the cutting edge is stuck at the second tile, raise the wheel a little by turning the knob so that subsequent tiles can easily be cut.

